

1. Installation Instructions


(1) Installation

① As shown in Figure 1,

Connect the power cord reserved for lamps and the pole cord with a terminal box.


The polarity of the power cord are as follows:

L(Brown): Live Wire, N(Blue): Null wire, GND(Yellow green): Ground wire.

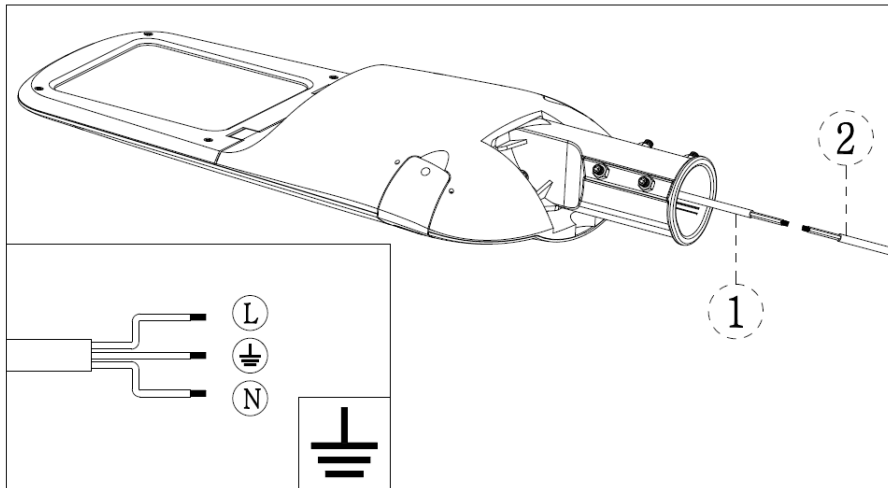

② As shown in Figure 2,


Take the lamp into the lamp arm, then tighten the four fastening bolts with 15Nm.

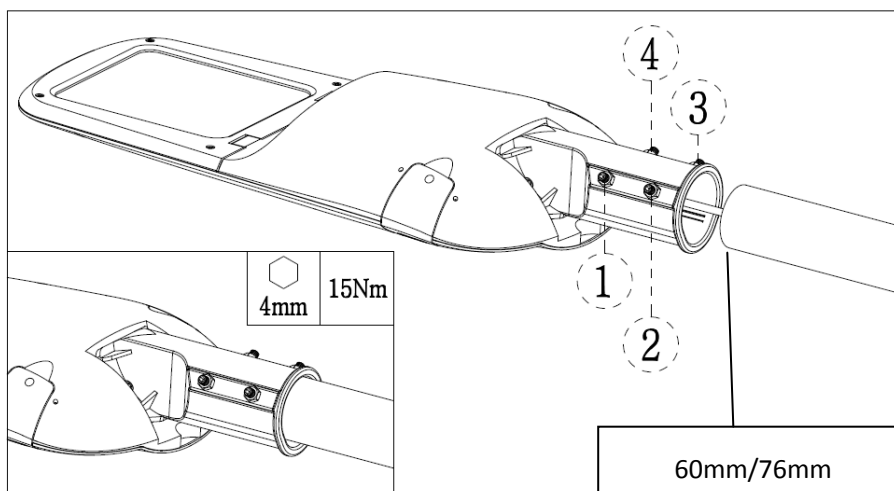

(2) Angle Adjustment


As shown in Figure 3,

Loosen the two fastening bolts, adjust the poles to the desired angle, then tighten the bolts.

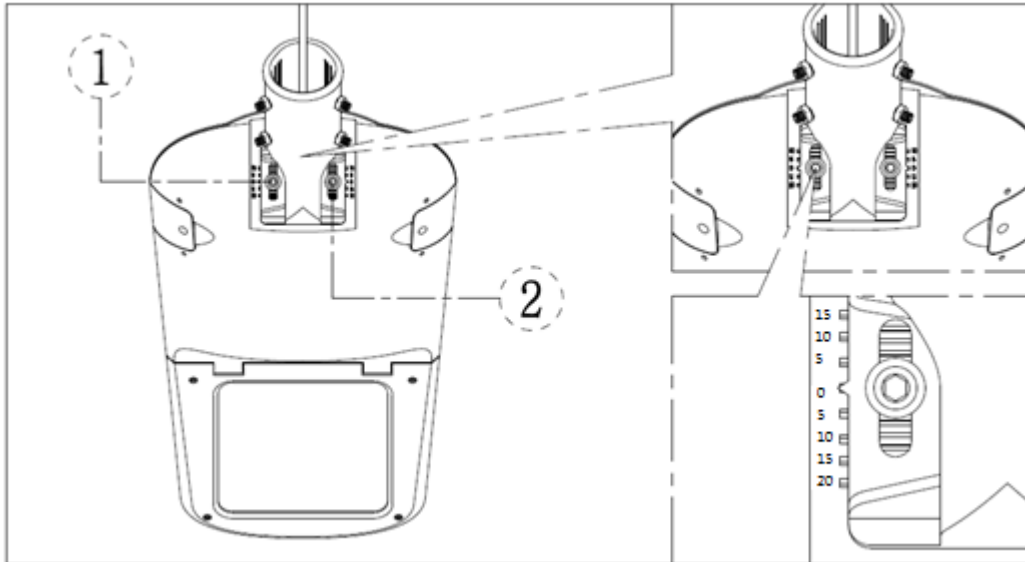

As shown in Figure 4,

Installation at horizontal and vertical, the angle adjustment range is -20 degrees to 15 degrees , the minimum interval is 5 degrees.

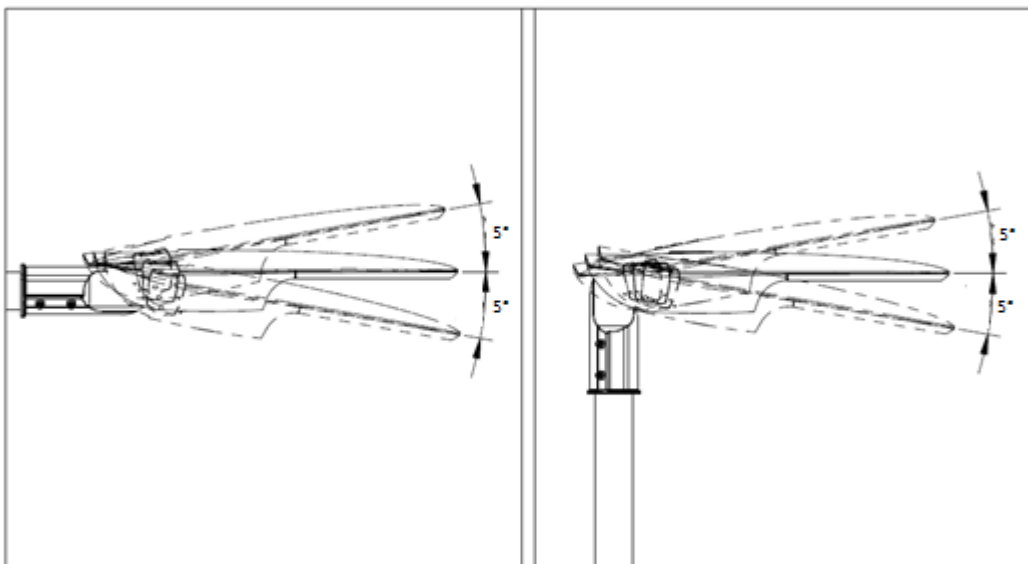


2. Maintenance

- Please clean and maintain the product time to time for long time and more safe use.
- Please use soft cloth with soap water to clean the product, then dry it with soft cloth.
- Please don't use chemical to clean the product, such as alcohol, petrol, otherwise, will corrode the product.

3. Warning

 - The lamp must be installed only after completion of electricity.
- The lamp should not be used in sealed environment.
- Don't mask the lamp.
- Lamps can not be directly installed on the surface of ordinary combustible materials.
- Please make sure the power is turned off before maintenance.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- Replace any cracked protective shield.



- For non-user replaceable light sources:

The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

Caution, risk of electric shock.



- Terminal block not included.